


Modification Of Mopar-type Starter

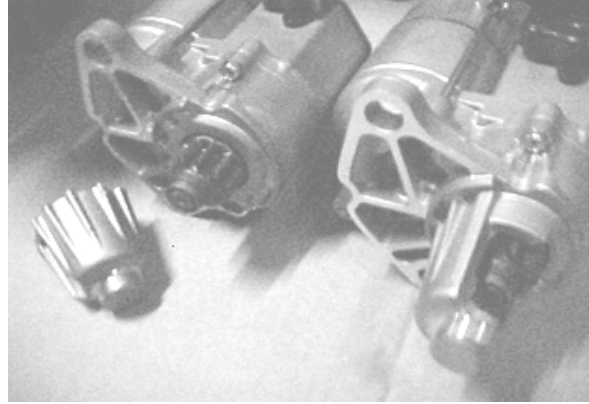

BECAUSE OF CLEARANCE, FOR YOUR APPLICATION YOU MUST MODIFY THE STARTER. THE "NOSE" OF THE STARTER MUST BE REMOVED. THIS REQUIRES THE USE OF A LATHE, BANDSAW, OR HACK SAW. MOST ANY MACHINE SHOP CAN PERFORM THIS OPERATION SAFELY AT A REASONABLE COST. WILCAP ALSO HAS THE MODIFIED STARTER AVAILABLE.

